

Setting up your DCX700

1. Connect to your cable service.

Connect the coaxial cable from your wall outlet to the CABLE IN PORT on the DCX700 box.

2. Connect your TV.

If you have a high-definition TV, use the HDMI connector.

If you have a standard-definition TV, use the Component Video connector.

3. Plug in the DCX700.



Connect the power cord to the DCX700, then plug it into an un-switched electrical outlet.

4. Turn on the TV and select the input.

If you have an HDTV, use the remote control for you TV to select the HDMI port you used to connect the DCX700.

If you have a TV without an HDMI port (Older TV's), select the component input.

5. Enjoy your new services!

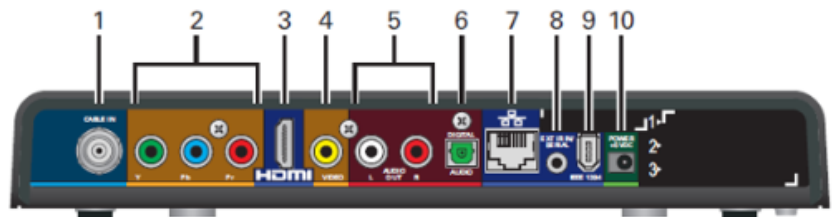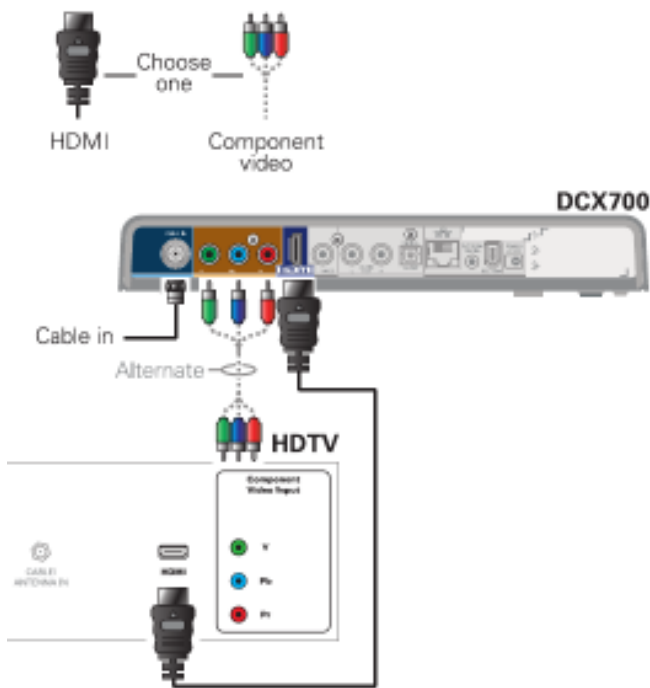

Number	Description
1.	Cable In – Connects Coax from Cable Wall Outlet
2.	Video Outputs / YPbPr – Component Video Output (HDTV)
3.	HDMI – High-Definition TV (HDTV) Connector
4.	Video Out – Composite Video (SDTV)
5.	Audio Out – L/R Audio (SDTV)
6.	Digital Audio (Optical S/PDIF) – Provides Dolby® Digital or PCM Output
7.	Ethernet – Network Connection
8.	External IR Input – Connects to a Remote Control IR Receiver Cable
9.	IEEE-1394 – Audio and Video Device Connection
10.	Power Connector

If you need further help or have questions please call Riviera Utilities to speak with Customer Service. .

Foley Office 251-943-5001

Daphne Office 251-626-5000

Thank you!